
WinFast

TV Global Series Quick Installation Guide


Code: LR6618 P/N: W05G0134 Version A

Connect Input & Output Devices

Type A

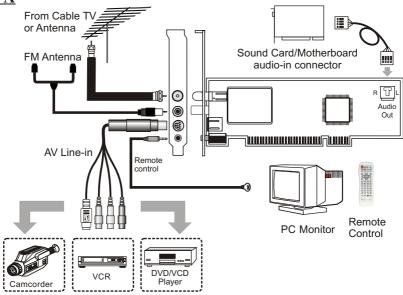

Type B (Only for PCB Version F or later)

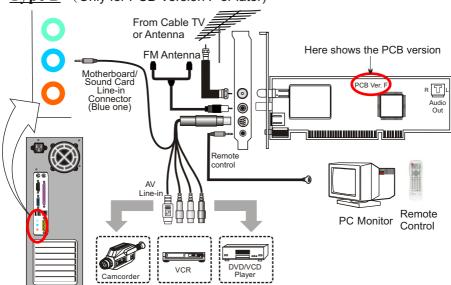

Note: 1. The diagram is for reference only. The actual board appearance may differ from the diagrams.

FM function is applicable to specific products, please refer to the description on the retail box for the detailed product specifications.

Driver & Application Installation

Step 1:

Turn on your PC and start up the Windows.

Step 2:

Shortly after entering the Windows, you will see the **Found New Hardware Wizard** dialog box. Click "Cancel".

Step 3:

Insert the Multimedia Software CD into your CD-ROM drive. Autorun will start and the menu screen will appear as the figure shown to the right. Click the button marked "WinFast TV Capture Card" on the virtual remote control.

Step 4:

Choose the language for the installation. Click "**OK**".


Step 5:

The wizard is preparing for the installation. There is a progress bar indicating the status.

Step 6:

The driver installation is going to start. Click "Next"



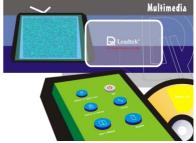







Driver & Application Installation


Step 7:

The wizard is installing the driver. There is a progress bar indicating the status. Please wait.



Step 8:

If warning messages show up, please click "Continue Anyway".

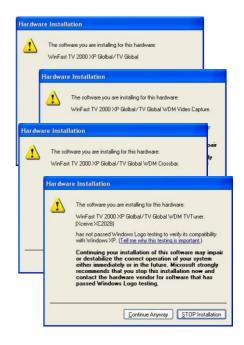

Step 9:

The installation is finished. Please choose "Yes, I want to restart my computer now" to reboot your computer, and click "OK".




Driver & Application Installation

Step 10:

After reboot, the wizard will automatically install WinFast application. Please choose the language for installation and click "**OK**".

Step 11:

The installation is progressing. Please wait

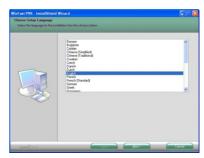




Step 12:

Please click "Yes" in next few steps to continue.

Step13:


Please click "Finish" to finish the entire installation.

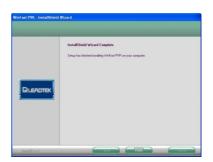

After Installation Complete

To make sure that you have successfully installed the hardware, please right-click on "My Computer" icon on the desktop. Choose "Properties", and click "Device Manager" button under the "Hardware" label.

Device Manager Window will show up. Click on the "+"in front of "Sound, video and game controllers", and check that if your WinFast hardware items are as the picture shows.

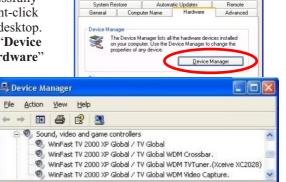

System Properties

WinFast TV Global Expert WDM Video Ca .

Capture Profile Setting

DirectBurn Setting

Snapshot Setting

Captured Filename Vide

Encode mode Progressive -

MPEG-2 Optimal Quality

Settings

Please launch WinFast PVR application, and click on the **Configuration** icon. After the setting window shows up, please click on the first label.



SB Live! Wave Device

Aux-in

Aux-in

If you chose Type A (mentioned on page 1) as your way of connection, first select a correct sound device under "Audio Device", which depends on whether you connect the audio cable to your sound card / motherboard's internal AUX-in or CD-in connector. And then change your Audio-Out and

Audio Recording Control Line to "AUX-in or CD-in" from the drop-down list.

If you chose <u>Type B</u> (mentioned on page 1) as your way of connection, first please select a correct sound device under "Audio Device", which depending on whether you connect the audio cable to your sound card / motherboard's external Line-in connector. And then change your Audio-Out and Audio Recording Control Line

to "Line in" from the drop-down list.

